

RoyalTek Bluetooth GPS Datalog Receiver

MBT-1100

User Manual

V1.0



Published on March 2008 by RoyalTek Company Ltd.

(Design and specifications are subject to change without notice.)

Content

| | |
|--|----|
| 1. Product Introduction | 3 |
| 1.1 Overview | 3 |
| 1.2 Main Features..... | 3 |
| 1.3 Product Notification..... | 3 |
| 1.4 Application..... | 3 |
| 1.5 Specification | 4 |
| 1.6 Logger function..... | 5 |
| 2. Before Start | 7 |
| 2.1 Check the Package Content | 7 |
| 2.2 Power Button (Right View)..... | 7 |
| 2.3 LED Display | 8 |
| 2.4 Hardware Features | 8 |
| 2.4.1. Power Button | 8 |
| 2.4.2. Bluetooth Status LED (Blue) | 8 |
| 2.4.3. GPS Status LED (Green) | 8 |
| 2.4.4. Memory Status LED (Red) | 9 |
| 2.4.5. Battery Status LED (Amber/Yellow) | 9 |
| 2.5. Getting Started | 9 |
| 2.5.1. STEP 1: Turn on Receiver and Wait for GPS Fix | 9 |
| 2.5.2. STEP 2: Connect to Bluetooth-Enabled Devices..... | 9 |
| 2.5.3. STEP 3: Connect to your Navigation Software | 9 |
| 2.6 How to use Car Charger to charge your handheld device..... | 10 |
| 3. Utility Installation | 11 |
| 3.1 Install USB Driver (Windows 2000/XP/2003) or (Windows Vista family)..... | 12 |
| 3.2 Install Data download Utility..... | 14 |
| 3.3 Transfer data to your PC or Notebook | 18 |
| 3.3.1 Connect MBT-1100..... | 18 |
| 3.3.2 Download Data | 19 |
| 3.3.3 Get and Set MBT-1100 Device Status | 20 |
| 3.3.4 Get the Data Logger Data Downloader revision information..... | 22 |

1. Product Introduction

1.1 Overview

The MBT-1100 is equipped with the latest GPS solution for fast and accurate fix on GPS signals. This latest round of technology advancements gives the users an “instant on” feel, and the experience in navigation becomes more natural. The dimension of 69.5(L) x 23(W) x 20(H) and weight only 38g, making it an ideal solution to carry everywhere.

1.2 Main Features

- NMEA0183 compliant protocol
- Extreme fast TTFF at low signal level.
- Adopt TCXO as GPS core clock source
- Industrial Standard
- Selectable Baud Rate
- WAAS / ENGOS is supported

1.3 Product Notification

- Charger operating temperature range 0 °C to +50 °C
- Discharger operating temperature range -20 °C to +60 °C
- Battery Storage temperature range -20 °C to +60 °C
- 10hr at full charge continuous operation mode.
- Humidity range up to 95% no condensing

1.4 Application

- PDA and Cellular Phone Navigation
- Consumer wireless GPS
- Automotive Vehicle Tracking
- Personal Positioning
- Sporting and Recreation

1.5 Specification

| GPS receiver | | |
|--------------------------------|-----------------------|---|
| 1 | Frequency | L1 1575.42MHz. |
| 2 | Code | C.A. Code. |
| 3 | Chipset Sensitivity | -158dBm (tracking) |
| 4 | Chipset cold start | 36 sec @ open sky |
| 5 | Chipset warm start | 33 sec @ open sky |
| 6 | Chipset hot start | 1 sec @ open sky |
| 7 | Reacquisition | Less than 1s |
| 8 | Position accuracy | Without aid: 3.0m 2D-RMS DGPS (WAAS, EGNOS, MASA, RTCM): 2.5m |
| 9 | Maximum altitude | 18000 m |
| 10 | Maximum velocity | 515 meter/second maximum |
| 11 | Update rate | Continuous operation: 1Hz |
| 12 | Dimension (L x W x H) | 69.5 x 23 x 20mm |
| Interface | | |
| 13 | I/O Pin | 8pin |
| Mechanical requirements | | |
| 14 | Weight | 38±1g |
| Power consumption | | |
| 15 | Vcc | 5V |
| 16 | Current | - Fix : 55mA @ 5.0V (Avg.) - Acquisition : 70mA @ 4.2V from battery (Avg.) |
| Environment | | |
| 17 | Temperature | - For charge : 0 ~ +50°C (under 5hrs) - For discharge : -20 ~ +60°C - Storage : -20 ~ +60°C |
| 18 | Humidity | ≤95% |
| Battery | | |
| 19 | Operation Time | ≥ 10 hours (avg.) |
| 20 | Battery | Li-on 550mAh, rechargeable |
| 21 | Replaceable | No |
| 22 | Connector | Mini USB 8pin |
| External GPS Antenna Connector | | |
| 23 | Type | None |
| Backup Battery | | |
| 24 | Backup Battery | None |
| LED Indicator | | |

| | | | |
|--------------|---|---|---|
| 25 | Status | LEDs showing GPS, Bluetooth, Power, Memory status | |
| 26 | Original Display | 1 | Yellow LED indicates power is in charging |
| | | 2 | Blinking Amber LED indicates Battery Low |
| | | 3 | Glowing Green LED indicates position is fixed Blinking Green LED indicates position not fixed |
| | | 4 | Glowing RED LED indicates Memory Full (GPS Green LED off) Erased memory data, RED LED Blinking |
| | | 5 | Glowing Blue LED indicates Bluetooth is connected Blinking Blue LED indicates Bluetooth is not fixed |
| Location Log | | | |
| 27 | Data logger | Yes | |
| 28 | Flash Type | 64Mb Serial Flash | |
| 29 | Data Type | | |
| | | | |
| | Data Type | | Records |
| | 1 : UTC Time, Longitude, Latitude | | Greater than 360,000 |
| | 2 : UTC Time, Longitude, Latitude, Altitude | | Greater than 300,000 |
| | 3 : UTC Time, Longitude, Latitude, Altitude, Velocity | | Greater than 260,000 |
| | 4 : All Data | | Greater than 80,000 |
| Bluetooth | | | |
| | Bluetooth Operating Frequency | 2401~2479 MHz | |
| | Bluetooth certified | BT 2.0 | |
| | Bluetooth UART port support data rate | 115200 | |
| | Bluetooth distance | ≥ 10m | |

1.6 Logger function

- MBT-1100 provides "Log On Demand." (LOD) as factory default, the receiver will log the position only when the Green LED glowing (GPS fix) and push the power button when the 3 LEDs (Green, Blue, Red) blink then the current position will be saved.
- If the Green LED blinks then MBT-1100 will not save the current position.
- There are two modes for the log function, one is "log by push button only (LOD)", the other is "log by time", and default is LOD only. If you need MBT-1100 log the position by time interval, you should use Data Download utility to change the log method to log by time. Please read

page 21 for the operation.

- Power on/off need to push the power button for 5 seconds

2. Before Start

2.1 Check the Package Content


Before you start using *MBT-1100*, please check out if your package includes the following items. If any item is damaged or missed, please contact your reseller at once.

- MBT-1100 Bluetooth GPS datalog receiver
- Car Charger
- CD
- AC Adapter (optional)
- USB cable
- PU GRIP PAD

2.2 Power Button (Right View)



2.3 LED Display

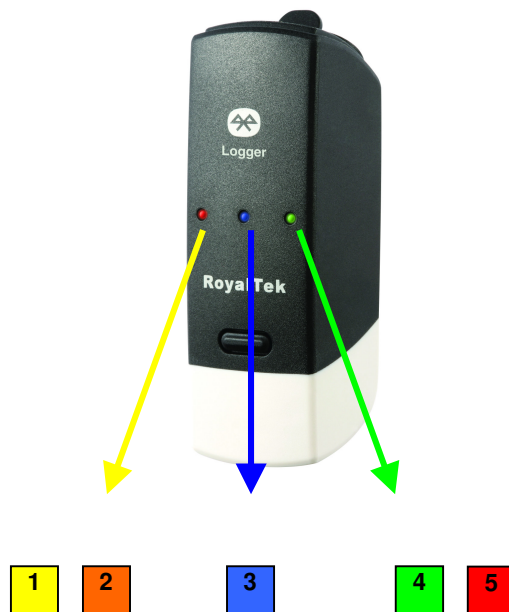

| | |
|---|---|
| 1 | Yellow LED indicates power is in charging |
| 2 | Blinking Amber LED indicates Battery Low |
| 3 | Glowing Blue LED indicates Bluetooth is connected Blinking Blue LED indicates Bluetooth is not fixed |
| 4 | Glowing Green LED indicates position is fixed Blinking Green LED indicates position not fixed |
| 5 | Glowing RED LED indicates Memory Full Erased memory data, RED LED Blinking |

2.4 Hardware Features

2.4.1. Power Button

Power ON / Power OFF

2.4.2. Bluetooth Status LED (Blue)

Glowing - Bluetooth is on and ready to transmit.

2.4.3. GPS Status LED (Green)

Glowing - Position is fixed.

Steady light – Device is on but position is not fixed.

2.4.4. Memory Status LED (Red)

Glowing – Memory is full.

2.4.5. Battery Status LED (Amber/Yellow)

None - Battery has adequate power supply.

Amber - Power is low. Charging immediately is required.

Yellow - Connected to power charger, charging.

LED off - Battery is fully charged.

2.5. Getting Started

2.5.1. STEP 1: Turn on Receiver and Wait for GPS Fix

If the position has not been fixed yet, the Green LED will be still. If the position has been fixed, the Green LED will be Glowing.

You are ready to connect to your Bluetooth-enabled mobile device and use your GPS application.

2.5.2. STEP 2: Connect to Bluetooth-Enabled Devices

From your Bluetooth-enabled handheld device, execute Bluetooth application software to search *MBT-1100* and then connect it to your device. If the connection between your device and *MBT-1100* is successful, the Blue LED will be Glowing.

Note: Type in pin code=0000 during configuration.

2.5.3. STEP 3: Connect to your Navigation Software

- Load your GPS mapping or routing software, along with the corresponding maps of the areas that you are occupying or plan to travel to.
- Start the application. Make sure the application is set for the COM port that your Bluetooth-enabled mobile device will use for serial communication. Now you should be ready to use your GPS application as directed by the user documentation that came with the software. More configurations may be necessary.
- Refer to the following software application user manual to set up the parameters of the device via Bluetooth radio.

2.6 How to use Car Charger to charge your handheld device

- Connect car charger into your adapter connector of *MBT-1100*.
- Plug adapter connector into handheld device connector and plug car charger into cigar-lighter.

3. Utility Installation



The Main Menu of Installation CD shows as above.

- Click the **Install USB Driver (Windows 2000/XP/2003)** or **Install USB Driver (Windows Vista family)** to install the USB Driver, which is needed when you connect the MBT-1100 to your PC or Notebook.
- Click the **PC Software** to install the software application.
- Click the **User Manual** to open the user manual of MBT-1100.
- Click the **View Royaltek Website** to link our <http://www.royaltek.com>, please make sure your PC connects to Internet first.
- Click the **Browse CD Contents** to open the explorer to browse the files within the CD.


3.1 Install USB Driver (Windows 2000/XP/2003) or (Windows Vista family)

Install the USB Driver from CD.

When screen shows the installation window as follows:



Click "Next>" to next page", or click "<Back" to back last stage or "Cancel" to give up installation.

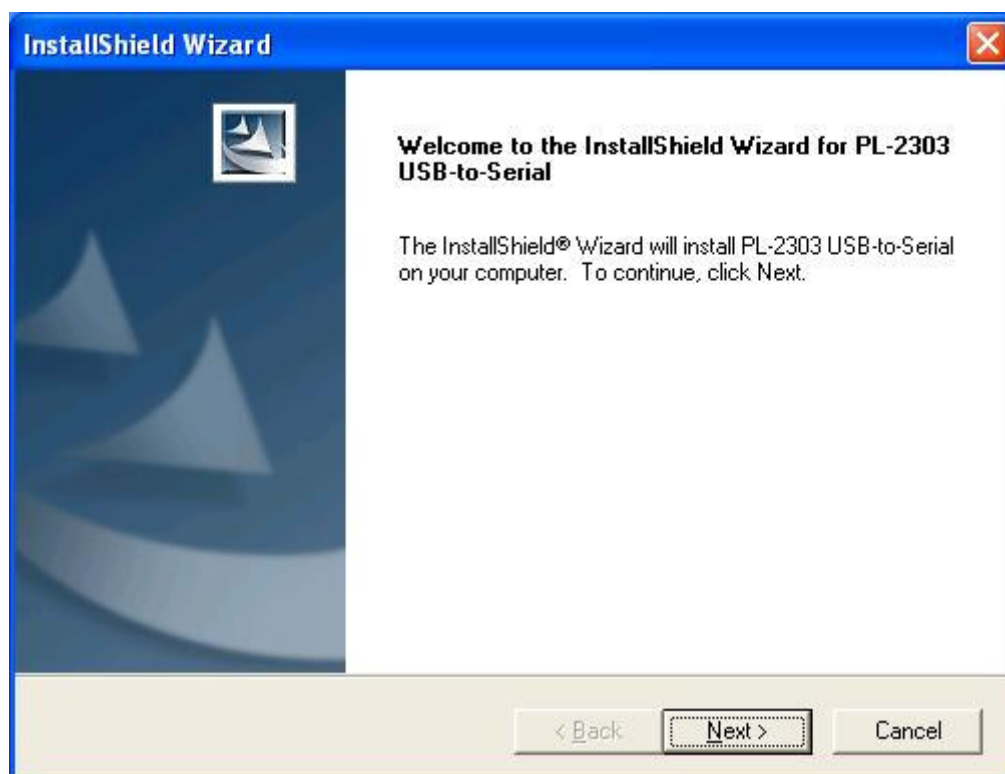


Please click "Finish" to finish the Installation.



For USB Driver Vista version, if re-install, please click "<YES>" to remove the driver. If click "<NO>", install may occur hand up problem.

3.2 Install Data download Utility


Click "Next>" to next page", or click "<Back" to back last stage or "Cancel" to give up installation.

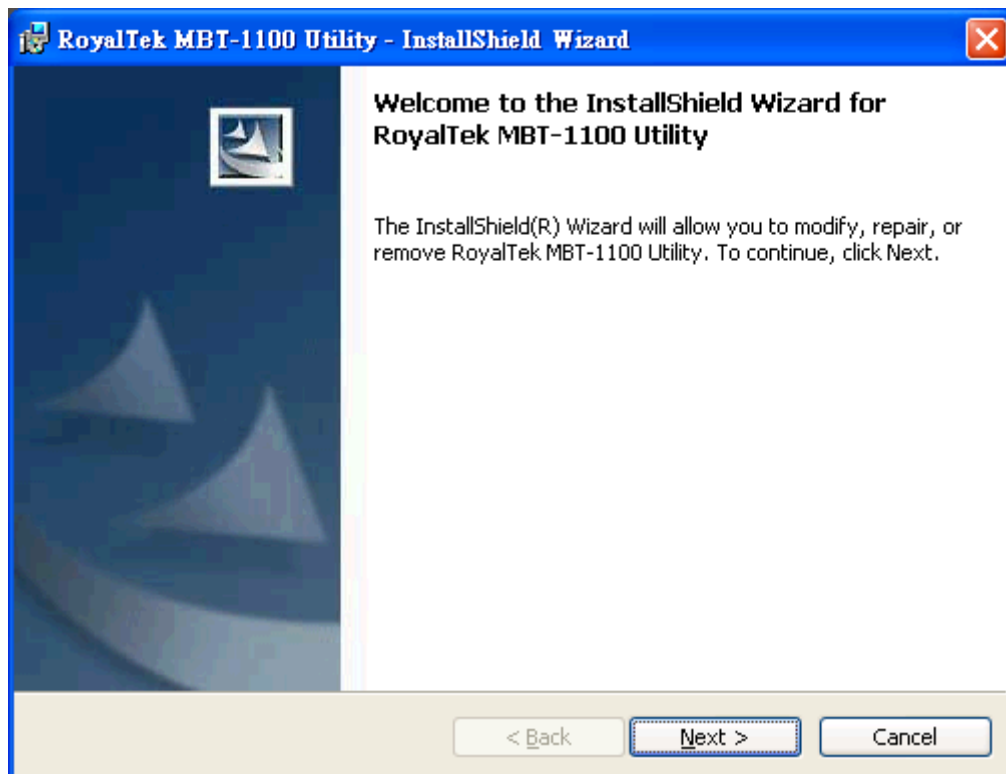


To the License Agreement page: Click " I accept the terms in the license agreement" then click "Next>" to next page, or click "<Back" to back last stage or "Cancel" to give up installation.




Click "Install" to start installation. Or click "<Back" to back last stage or "Cancel" to give up installation.

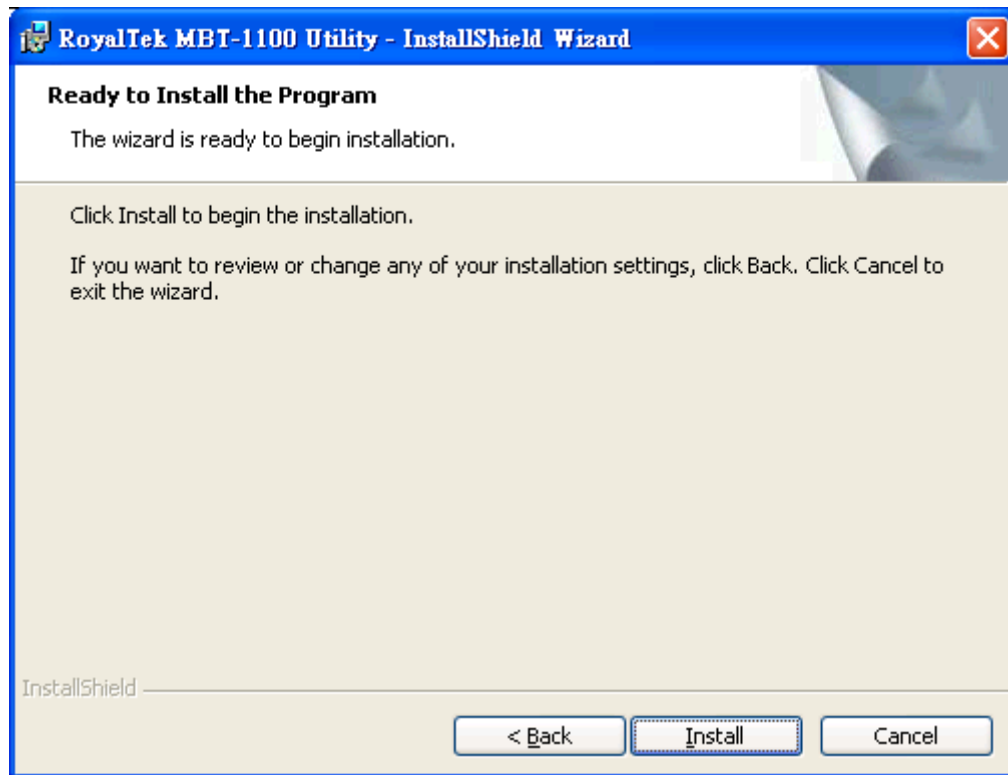

Start installation.

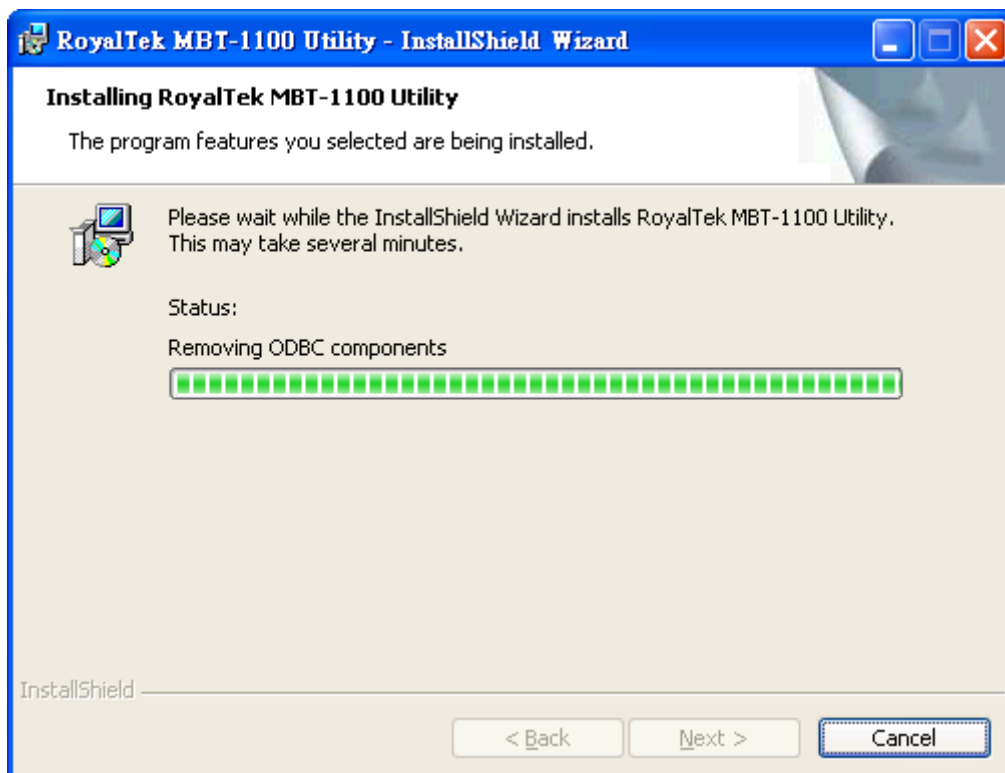

Please click "Finish" to finish the Installation.

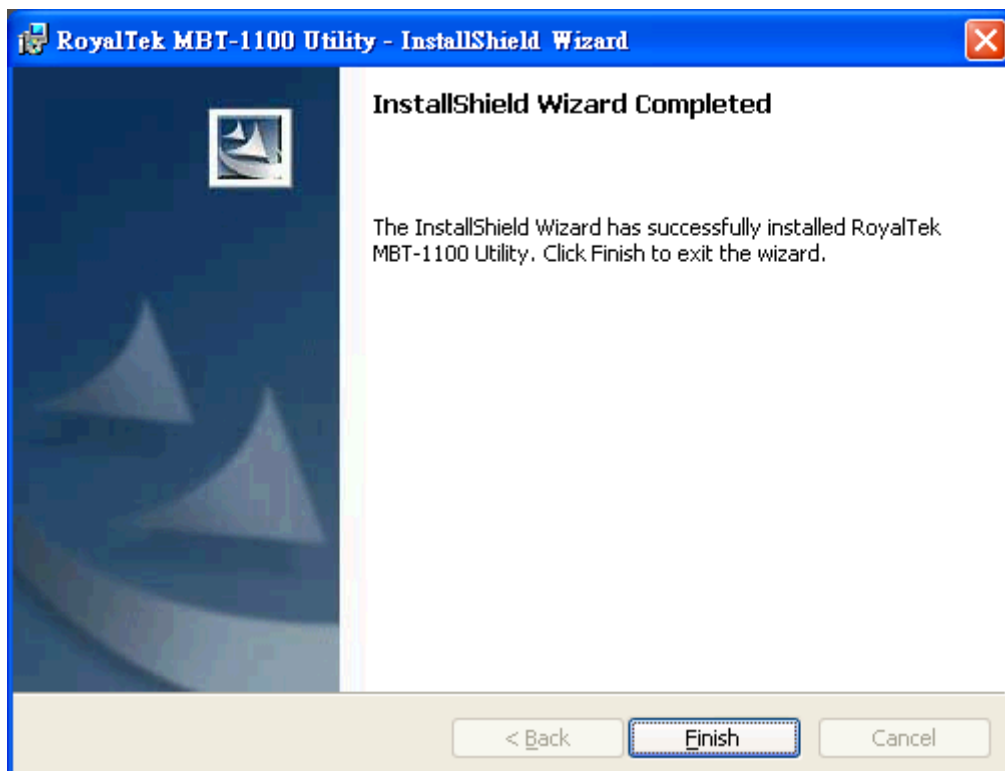

Finally you will see the icon on windows desk.




3.3 Transfer data to your PC or Notebook

Usage Notes:

- (1) When you turn on the power button, it starts to search the GPS Signal. After the GPS position fixed, it will begin to record and save the position data.
- (2) If you want to stop recording the GPS data, just turn the power off.
- (3) When download or erase data form MBT-1100, Receiver still continues record and save the position data.
- (4) The time of the log data of MBT-1100 is UTC Time. User doesn't need to adjust the Clock setting of a camera.

3.3.1 Connect MBT-1100


- Turn on the power of MBT-1100 and use the USB cable to connect to the USB port on PC.
- Check the COM port of MBT-1100 first. Click "Start" → "Control Panel"→"Performance and Maintenance"→"System", and you will see the System Properties dialog box; click on "Hardware" tab and then the "Device Manager" button. Expand the "Ports (COM & LPT)" item, and the "Prolific USB-to-Serial Com Port" is the COM port of your MBT-1100.



Open data download Utility


For the First using

Step 1: Open the designated serial port and the button show "Connect".

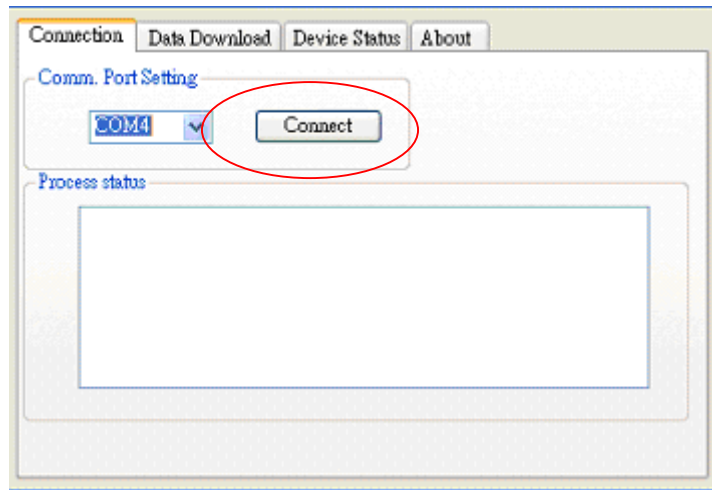


3.3.2 Download Data


Step 1: Change page to "Data Download" menu bar.



Step 2: Press "Get Data" button and select NMEA output folder.

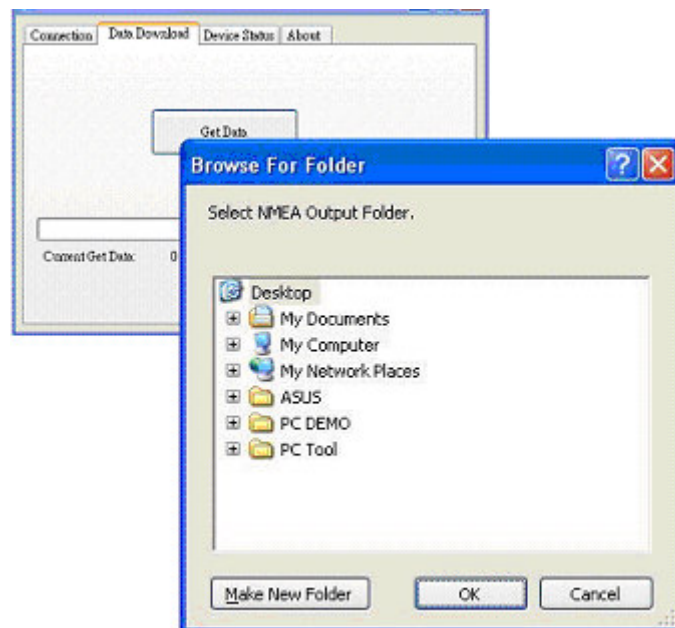


Step 3: When download finish, there will be a warning message to ask for erasing memory.

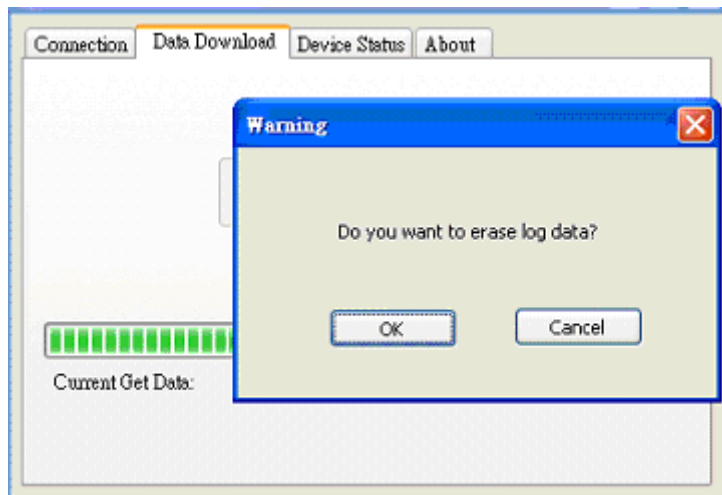


3.3.3 Get and Set MBT-1100 Device Status

Step1: Change to "Device Status" menu bar



Step 2: You can review the MBT-1100 default setting configuration.

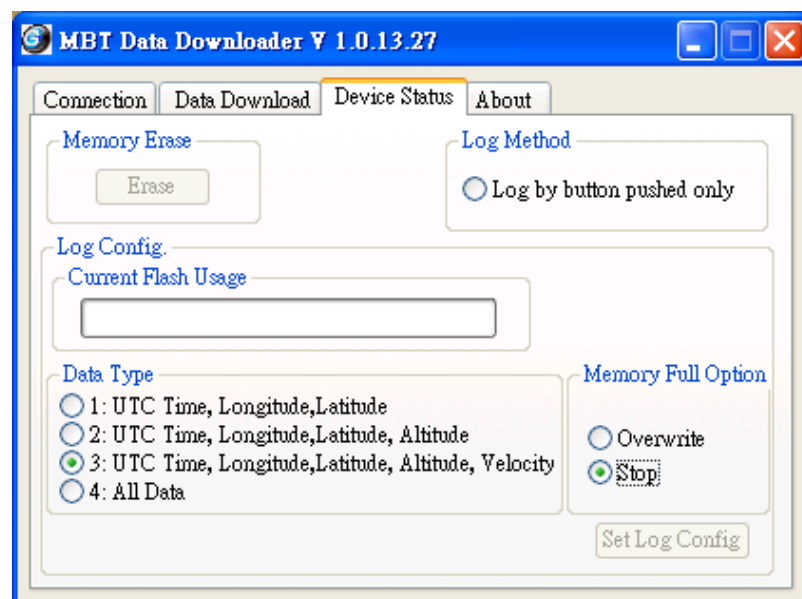

◆Time Interval (user adjustable)

Default setting is 1secs

1secs ~ 60secs, user adjustable

◆Data Type (user adjustable)

There are 4 options for user to choose these data items to be saved in the MBT-1100.

- 1:** UTC Time, Longitude, Latitude, will be saved.
- 2:** UTC Time, Longitude, Latitude, Altitude, will be saved.
- 3:** UTC Time, Longitude, Latitude, Altitude, Velocity will be saved.
- 4:** All data will be saved.

◆ **Memory Full Option (user adjustable)**

The default memory operation setting is "Stop".

If the memory is full then the system will stop to record.

◆ **Memory Erase**

Erase all memory.

◆ **Log Method**

Check the log will save when button pushed.


Log by time

Log by button pushed only

◆ **Log config**

Show the Flash Usage.

Step 3: User adjustable: Memory Full Option, key in the Time Interval.

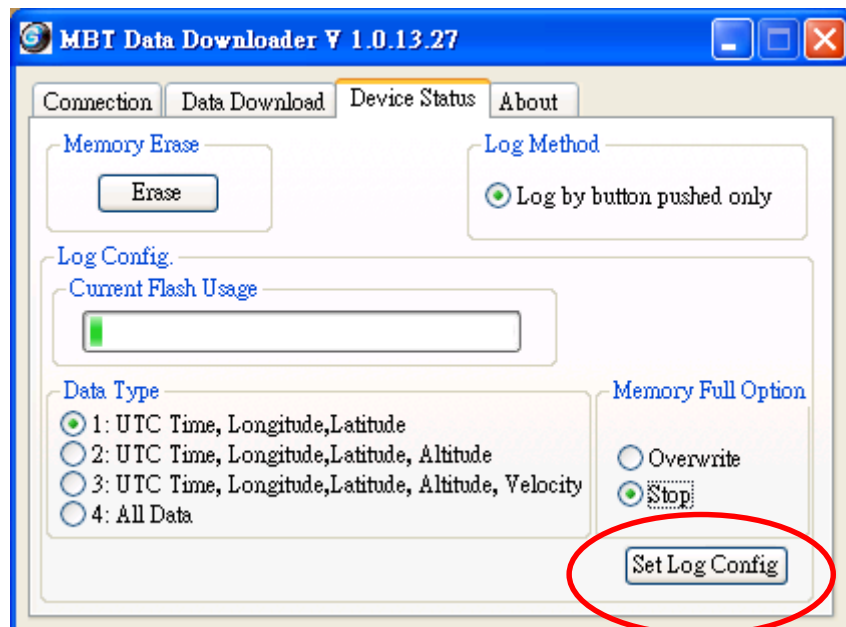


When you done the configuration setup, press the "**Set Log Config.**" button to save the setting to the receiver.




Finally, these setting take effect.

3.3.4 Get the Data Logger Data Downloader revision information

Step1: Change to "About" menu bar



User can get the Royaltek Data Logger Data Downloader version.

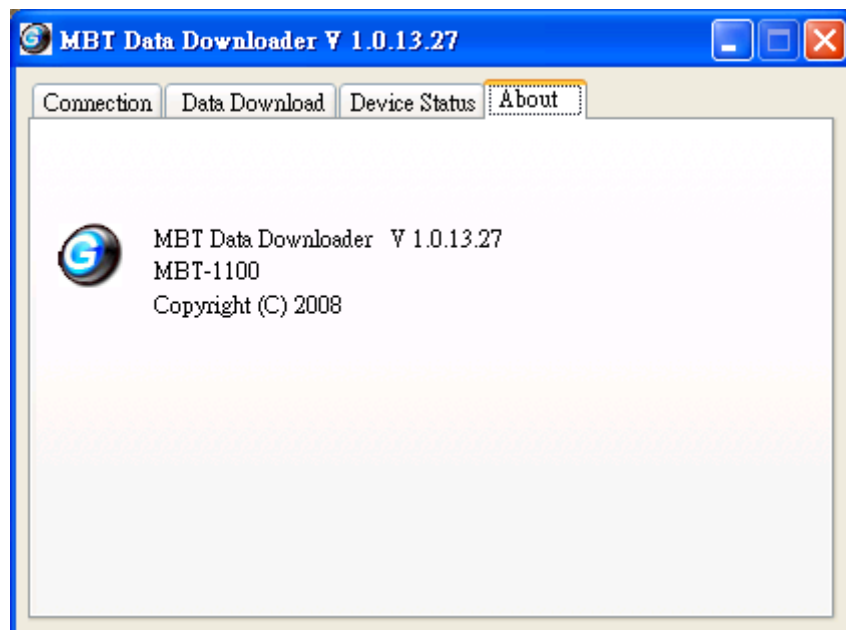

FCC Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Revision History

| Data | Revision | Note |
|-------------|----------|---------------|
| March, 2008 | V1.0 | Final Release |

Contact information

Headquarters

4F., No.188, Wen Hwa 2nd Rd., Kuei Shan, Tao Yuan 333, Taiwan

TEL: 886-3-3960001

FAX: 886-3-3960065

Http://www.royaltek.com

Sales: [Http://www.royaltek.com/contact](http://www.royaltek.com/contact)

FAE: fae@royaltek.com